

LED OUTDOOR BOLLARD LIGHT

INSTALLATION GUIDE

Eurolumen

MODEL ELA908

CANTILEVER ROUND-HEAD BOLLARD

1



VERIFY FIXTURE / 600 mm / 4-ANCHOR BASE

2



POSITION ACTUAL BASE / MARK 4 ANCHORS + ENTRY

3



DRILL / SET 4 ANCHORS / PREPARE SEALED CONDUIT

4



ISOLATE SUPPLY / CONNECT L-N-PE / SEAL JOINT

5



LOWER UPRIGHT / LEVEL / TIGHTEN 4 FASTENERS

6



POWER ON / COMMISSION / VERIFY DOWNWARD OUTPUT

BOLLARD POWER + FOUNDATION SEQUENCE

220 V SUPPLY

ISOLATOR + EARTH

→

SEALED CONDUIT

CENTRAL ENTRY

→

IP-RATED JOINT

L / N / PE

→

ELA908

SQUARE 4-POINT BASE

1. Provide a level concrete footing sized for the site load; keep the conduit at the base centre.

2. Use all four model-specific fixing points and corrosion-resistant foundation anchors.

3. Keep the field joint dry and sealed; do not bury an unapproved connector directly in soil.

4. Confirm product orientation and plumb before tightening the anchors evenly and commissioning.

DO NOT ENERGIZE UNTIL THE BASE, EARTH, GLAND AND ALL ANCHORS ARE SECURE.

ELA908 INSTALLATION DATA

HEIGHT OPTIONS	400 / 600 / 800 mm
ILLUSTRATED HEIGHT	600 mm
HEAD / BODY	HEAD D120 / REACH 292
BASE	150 x 150 mm
ANCHOR PATTERN	4 x D12
POWER / INPUT	10 W / 15 W / 220 V
OUTPUT	DOWNWARD / ON-OFF



Installation must be performed by qualified personnel using the supplied or specified mounting parts.

Confirm model, height, voltage, base geometry, anchor positions and underground services before drilling.

The concrete footing, cable gland and electrical joint must be suitable for the site and outdoor exposure.

Retain this guide with the project handover and maintenance records.



WARNING

- ISOLATE POWER BEFORE INSTALLATION, CLEANING OR SERVICE.

- VERIFY BURIED SERVICES, ANCHORS, EARTH, SEALS AND PLUMB BEFORE POWER ON.

CE

PE OUTDOOR