 


1



CHECK LUMINAIRE AND COMPATIBLE TRACK

2



MAINS POWER  
OFF

SWITCH OFF AND ISOLATE MAINS POWER

3



SET ADAPTER LOCK TO OPEN

4



ALIGN ADAPTER WITH TRACK

5



INSERT AND LOCK ADAPTER

6



CHECK SECURE / AIM / POWER ON

TRACK POWER CONNECTION

POWER SUPPLY  
220V AC

TRACK RAIL  
L / N / PE

LOCKING ADAPTER  
POLARITY ALIGNED

LED LUMINAIRE  
AIM AND TEST

1. Isolate the mains supply before fitting or removing any luminaire.

2. Confirm track voltage, phase selection and adapter polarity before insertion.

3. The adapter must sit fully in the rail before the locking control is engaged.

4. Support the luminaire while unlocking; do not pull it from the cable or lamp head.

USE ONLY A COMPATIBLE 220V TRACK SYSTEM AND CONFIRMED ADAPTER TYPE.

TRACK INSTALLATION DATA

|               |                                   |
|---------------|-----------------------------------|
| TRACK SYSTEM  | CEILING-MOUNTED 220V TRACK        |
| ADAPTER TYPE  | INTEGRATED DRIVER / TRACK ADAPTER |
| PRODUCT SIZE  | 50 x 50 mm                        |
| INPUT         | 220V AC VIA TRACK RAIL            |
| POWER OPTIONS | 6 / 8 / 12 / 15 W                 |
| BEAM OPTIONS  | 15 / 24 / 36 / 50 DEG.            |
| AIMING        | ROTATE / TILT AFTER LOCKING       |
| LOCATION      | INDOOR / DRY LOCATION             |



Installation must be performed under the guidance of qualified technical personnel.  
Switch off and isolate the mains supply before installation or maintenance.  
Confirm that the selected driver, dimming control and mounting dimensions match the product label.  
Retain this guide with the project handover and maintenance records.



WARNING

- DO NOT INSTALL, REMOVE OR REPOSITION WHILE POWER IS ON.

- VERIFY TRACK COMPATIBILITY, POLARITY AND ADAPTER LOCK BEFORE USE.

CE RoHS INDOOR