

LED COPPER LIGHT INSTALLATION GUIDE

Eurolumen

MODEL ELA406


L-PROFILE COPPER SPIKE LIGHT

1



VERIFY L-PROFILE FIXTURE / CABLE / PARTS

2

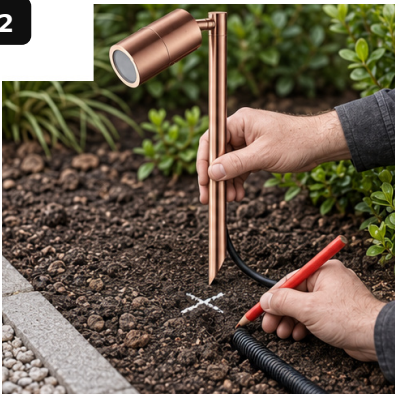

SELECT POSITION / CHECK BURIED SERVICES

3



PREPARE NARROW PILOT / ROUTE CONDUIT

4



CONNECT IN ACCESSIBLE IP-RATED JUNCTION

5



 
INSERT STAKE / KEEP PLUMB / SET AIM

6



POWER ON / COMMISSION / VERIFY BEAM

OUTDOOR LANDSCAPE POWER CONNECTION



1. Isolate the supply and verify the installation point is clear of buried services.
2. Use the factory cable; keep every joint sealed, accessible and above poor drainage.
3. Insert only the pointed stake section; keep the stem plumb and protect the copper finish.
4. Set the optical aim and confirm the cable is not pinched before commissioning.

NATURAL COPPER PATINA IS EXPECTED. DO NOT USE ACIDIC OR ABRASIVE CLEANERS.

COPPER LIGHT INSTALLATION DATA

PRODUCT SIZE	HEAD D63 x L110 / REACH 180 / H405
POWER	6 W
INPUT OPTIONS	24 V DC / 220 V AC
MOUNTING	POINTED SOIL STAKE / FACTORY CABLE
OUTPUT	SINGLE ADJUSTABLE BEAM
LOCATION	LANDSCAPE / SOIL
FINAL CHECK	FIX / SEAL / AIM / TEST



Installation must be performed by qualified personnel using the supplied mounting parts.
Confirm the model, voltage, exact mounting method, cable route and drainage before work.
Maintain the supplied gasket, gland, factory cable and accessible waterproof connection.
Copper naturally darkens and develops patina; this appearance change is not a defect.



WARNING

- ISOLATE POWER BEFORE INSTALLATION, CLEANING OR SERVICE.
- VERIFY FIXINGS, EARTH, GLANDS AND SEALS BEFORE POWER ON.

CE PE OUTDOOR