

LED TRIMLESS RECESSED SPOTLIGHT INSTALLATION GUIDE

Eurolumen


MODEL ELX009

1




CHECK COMPONENTS

2

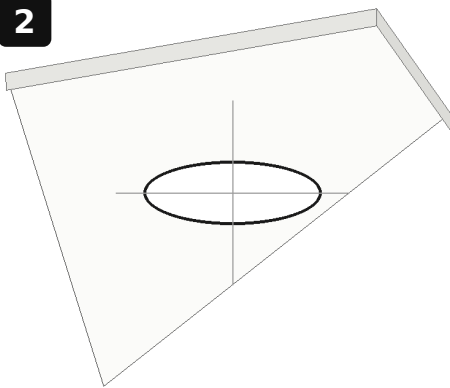

CUT OPENING TO CONFIRMED SIZE

3

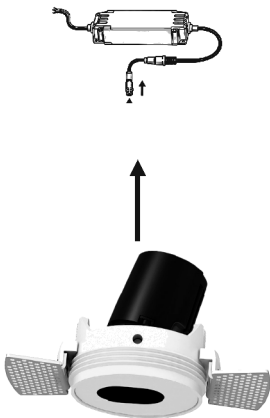


CONNECT MATCHED DRIVER

4




INSERT TRIMLESS HOUSING

5

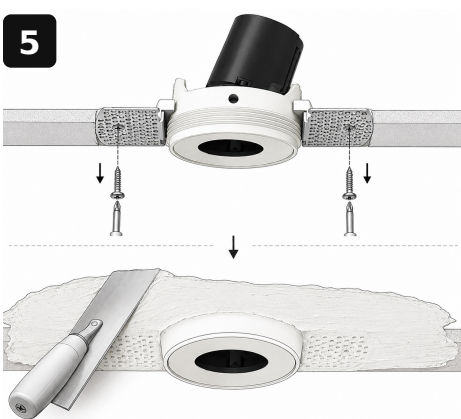

FIX MESH WINGS / APPLY PLASTER

6

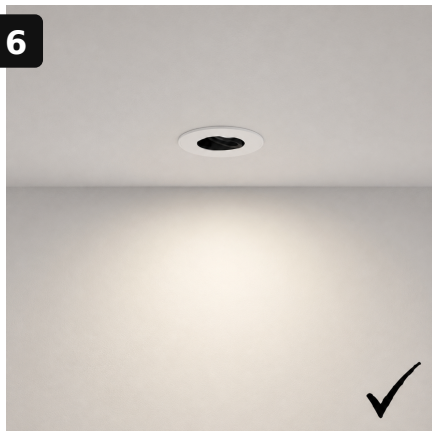

CHECK FLUSH FIT / POWER ON

WIRING DIAGRAM




ON/OFF: L / N
DALI: DA / DA

0-10V: DIM+ / DIM-
Bluetooth: matched driver

FOLLOW SUPPLIED DRIVER LABEL

MOUNTING DATA

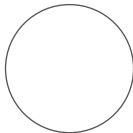


CUT-OUT Ø TBC

CEILING THICKNESS
TBC

INSTALLATION TYPE PLASTER-IN / TRIMLESS | INDOOR DRY LOCATION
PRODUCT SIZE Ø85 x H98 mm

IP RATING
IP20



Installation must be performed under the guidance of qualified technical personnel.
Switch off and isolate the mains supply before installation or maintenance.
Confirm the selected driver and dimming control match the product label.
Retain this guide with the project handover and maintenance records.



WARNING

- Do not install while power is on.
- Keep insulation and combustible material clear of the luminaire and driver.
- Use only the matched driver and confirmed mounting dimensions.

CE

RoHS

